

# Smart BlueTooth Speed Sensor

## User Manual


Thanks for your interest in our smart fitness products! Please read this manual carefully before operation. The information in this manual is subject to change without prior notice as a result of improvements in the instruments performance and functions.

### Note:

- Do not try to separate, maintain, or refit this product.
- Do not use it in the area which prohibits electrical products, such as airplane.
- Do not put it or its accessory into your mouth.
- Do not put it under the water or other liquid.
- Do not put it in a wet and dusty environment.
- Do not expose it to bright light or heat to prolong its service life.
- Do not drop it or its accessory to avoid any unnecessary problems.
- When it is not in use for a long time, please charge battery fully and

connect ES-CONN with a USB cable.

- We are not responsible for any loss of data during operation or maintenance.
- Please note this product is prohibited from being used illegally.

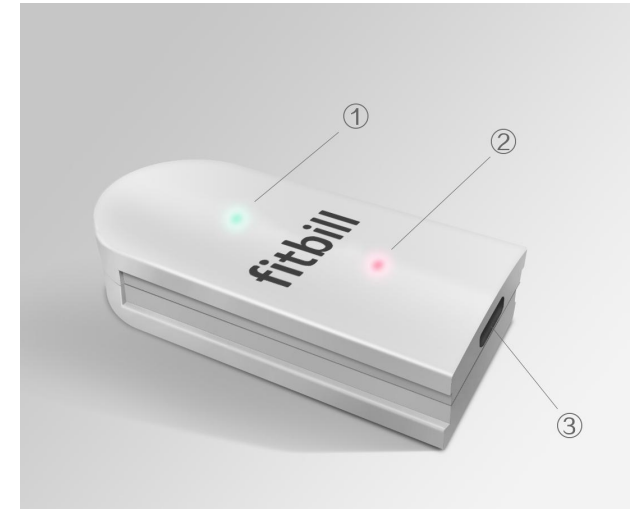

Indicator Light	Status	Description
① Network Light	Bright	Have a signal, connectable
	Flashing	Data Transmitting
	Off	No signal, not connectable
② Power Light	Bright	Charging
	Off	Uncharged
Port	Description	
③ USB Port	Type B Connector for charging and connecting the device.	

## Charging Instruction

- Charge ES-CONN with mobile adapter and USB cable. Input: 5V---1.0A ;
- The red light means it's charging. Charging Time:2 hours

## Connect ES-CONN with APP

- Connection : Wireless Bluetooth 4.0 ;
- **Step 1 : Awakening.**

The default status of ES-CONN is standby. When it senses the movement of equipment, green light will be bright and connects to Bluetooth within 60 seconds; Otherwise, the device will be in standby status and green light will be off, waiting for next awakening. In order to awaken ESCONN, please exercise for 5 times before paring.

- **Step 2 : Connection.**

- First, Turn on Bluetooth on your mobile phone. The App will remind you to turn on Bluetooth when you exercise without connecting Bluetooth. Then open the App, access the menu of sports, you will see the name of ES-CONN displayed in the Bluetooth devices section, tap the name. The mobile phone then automatically tries to pair with ES-CONN.

- When ES-CONN connects to App successfully, green light changes from bright to slow flashing (about 2 times/second) and quick flashing (about 5 times/second) during exercise.
- When exercise is over, green light changes from slow flashing (about 2 times/second) to bright and off after 180 seconds.
- When green light is bright, ES-CONN may be not connected for some Bluetooth signal or electromagnetic environmental problems. Try to connect Bluetooth repeatedly.

## Bluetooth Pairing Guide:

